


























phone connectors (Supplied)	Suitable for
<p>LG Chocolate</p> 	<p>All LG Chocolate (KG800) Series Phones</p> <p>LG KG800 Chocolate, LG KG810, LG KG320, Shine</p>
<p>iPod®</p> 	<p>Dedicated Connector for I-pod, I-pod nano, Iphone</p> <p>iPod® nano (1Gb, 2Gb, 4Gb) iPod®(10Gb, 20Gb, 30Gb, 60Gb) iPod® Video (30Gb, 60Gb, 80Gb) iPhone®, iTouch®, iPod® Classic (80Gb, 160Gb)</p>
<p>Nokia® (3.5mm jack)</p> 	<p>All older Nokia mobile phone and other devices using the 3.5mm jack.</p> <p>1100, 1110, 1221, 1260, 1261, 1600 2260, 2270, 2285, 2300, 2600, 2650, 3100, 3105, 3108, 3120, 3200, 3220, 3230, 3285, 3300, 3350, 3360, 3361, 3390, 3395, 3510, 3510i, 3520, 3530, 3560, 3570, 3585, 3585i, 3586, 3586i, 3588i, 3589i, 3590, 3595, 3600, 3620, 3650, 3660, 5100, 5140, 5140i, 5210, 5510, 6020, 6021, 6030, 6060, 6100, 6108, 6170, 6200, 6220, 6225, 6230, 6230i, 6260, 6310, 6310i, 6340, 6340i, 6360, 6370, 6385, 6510, 6560, 6585, 6590, 6590i, 6600, 6610, 6610i, 6620, 6630, 6650, 6670, 6680, 6681, 6800, 6810, 6820, 6822, 7200, 7210, 7250, 7250i, 7260, 7270, 7280, 7600, 7650, 7700, 7710, 7600, 7610, 7650, 8260, 8265, 8265i, 8270, 8290, 8310, 8390, 8800, 8910, 8910i phones, 9210i Communicator, 9290 Communicator, 9300, 9500 Communicator, N-Gage and N-Gage QD, 2310</p>
<p>Nokia® (2mm jack)</p> 	<p>New Nokia Mobile Phones including the N series</p> <p>N70, N71, N72, N73, N80, N80ie, N90, N91, N918GB, N92, N93, E61, E62, 770, 2865i, 3155i, 3250, 5500, 6070, 6080, 6101, 6102, 6102i, 6103, 6111, 6125, 6126, 6131, 6133, 6136, 6151, 6155i, 6165i, 6233, 6265i, 6270, 6280, 7360, 7370, 6080, 6300, 7373, 5310, N95, 5610, 6500/slide, N81, N82</p>
<p>Samsung® (wide connector)</p> 	<p>Samsung® Wide flat connector</p> <p>SCH-A210, SCH-A310, SCH-A399, SCH-A475, SCH-A505, SCH-A509, SCH-A530, SCH-A539, SCH-A563, SCH-A564, SCH-A570, SCH-A591, SCH-A592, SCH-A595, SCH-A599, SCH-A610, SCH-A650, SCH-A670, SCH-A795, SCH-A809, SCH-N181, SCH-N181, SCH-N182, SCH-N191, SCH-N195, SCH-N288, SCH-N330, SCH-N370, SCH-N375, SCH-X199, SCH-X209, SCH-X309, SCH-X319, SCH-X359, SGH-A200, SGH-A288, SGH-A300, SGH-A308, SGH-A400, SGH-A408, SGH-A500, SGH A561, SGH-A608, SGH-A800, SGH-C100, SGH-C130, SGH-C207, SGH-C225, SGH-C417, SGH-D100, SGH-D307, SGH-D347, SGH-D357, SGH-D407, SGH-D415, SGH-D500, SGH-D600, SGH-D800, SGH-E100, SGH-E105, SGH-E300, SGH-E315, SGH-E316, SGH-E317, SGH-E330, SGH-E330N, SGH-E350, SGH-E335, SGH-E370, SGH-E400, SGH-E600, SGH-E630, SGH-E635, SGH-E700, SGH-E710, SGH-E715, SGH-E760, SGH-E770, SGH-E800, SGH-K528, SGH-N200, SGH-N400, SGH-N500,SGH-N620, SGH-N625, SGH-N628, SGH-P107, SGH-P207, SGH-P400, SGH-P408, SGH-P510, SGH-P735, SGH-Q100, SGH-Q200, SGH-Q208, SGH-Q300, SGH-R200, SGH-R208, SGH-R210, SGH-R210S, SGH-R220, SGH-R225, SGH-R225M, SGH-S100, SGH-S200, SGH-S208, SGH-S300, SGH-S300M, SGH-S307, SGH-S308, SGH S500, SGH-T100, SGH-T108, SGH-T200, SGH-T208, SGH-T209, SGH-T309, SGH-T319, SGH-T410, SGH-T400, SGH-T408, SGH-T500, SGH-T609, SGH-T619, SGH-T709, SGH-T719, SGH-V100, SGH-V200, SGH-V205, SGH-V206, SGH-X100, SGH-X105, SGH-X426, SGH-X427, SGH-X427M, SGH-X450, SGH-X460, SGH-X475, SGH-X480, SGH-X495, SGH-X497, SGH-X507, SGH-X600, SGH-X640, SGH-X660, SPH-A420, SPH-A580, SPH-A640, SPH-A900, SPH-M500, SPH-T100</p>
<p>Samsung® (small connector)</p> 	<p>Samsung® Small Thin connector</p> <p>SGH-D520, D800, D820, D830, D840, D900, E250, E390, E500, E570, E780, E870, E900, P300, P310, X820, X830, Z400, Z400v, Z510, Z520, Z530, Z540, Z540v, Z560, Z720, ZV40, E590, U600, E840, U300, F300</p>







	<p>Sony Ericsson® Wide connector</p> <p>D750i, J100a, J100c, J100i, J220a, J220c, J220i, J230c, J230i, K310a, K310c, K310i, K320i, K510a, K510c, K510i, K610i, K610im, K750c, K750i, K758c, K790a, K790c, K790i, K800i, M600i, M608c, P990i, V630i, W300c, W300i, W550c, W550i, W600c, W600i, W700c, W700i, W710c, W710i, W800i, W810c, W810i, W830i, W850i, W900c, W900i, W950i, W958c, Z520a, Z520c, Z520i, Z525a, Z525i, Z530c, Z530i, Z550a, Z550c, Z550i, Z558c, Z558i, Z610i, Z710c, Z710i, J220i, K618i, M600i, W800c, W830c T250i, K770i T650i W580i W910i</p>
	<p>Universal 4mm straight jack for</p> <p>Sony PSP® Sony PSP portable games system</p> <p>Creative Zen™ ZEN, ZEN Touch, ZEN Vision, ZEN Vision:M, MuVo², MuVo² FM</p> <p>TOM TOM® GO, GO 300, GO 500, GO 510, GO 700, GO 710, GO 910</p> <p>Two way radios Allows you to power many Two way radios that charge via a 4mm jack</p> <p>Camera's Allows you to power many digital cameras that charge via a 4mm jack</p>
	<p>Various phones and devices</p> <p>Smart Phones (orange) SPV C500, SPV C550, SPV M500, SPV C600, SPV M600 and SPV M3000</p> <p>HTC Phones MTeoR, P3300, P3600, P4350, S620, TyTN</p> <p>I-Mate Phones JASJAR, SP3, SP3i, SP4m, JAMin, K-Jam and Jam</p> <p>O2 XDA Phones XDA Exec, XDA Mini Pro, XDA Mini S, XDA SP, XPhone II and XPhone II m</p> <p>T-Mobile Phones MDA Vario, MDA Vario with Co-Pilot, MDA, MDA Pro, MDA Compact II, SDA, SDA Music and Dash</p> <p>Motorola® A780, E1070, E770v, KRZR K1, L2, L6, L7 i-mode, MPx200, PEBL V6, RAZR maxx V6, RAZR V3, RAZR V3i, RAZR V3x, RIZR Z3, SLVR L7, U6, V235, V360, V360v</p> <p>Qtek Phones 8010, 8020, 9100, 9000, S100, S110 and S200</p> <p>Blackberry™ 6210, 6220, 6230, 6280, 6510, 7100g, 7100i, 7100r, 7100t, 7100v, 7100x, 7105t, 7130e, 7210, 7230, 7250, 7270, 7280, 7290, 7510, 7520, 8100 (Pearl), 8700c, 8700f, 8700g,</p> <p>Other devices using the mini USB connector</p> <p>iRiver™ T10 series, T30 series, PMP-100 series, PMC-100 series, H300 Series, iGP-100, iFP-1000 series, iFP-900 series, iFP-800 series, iFP-700 series, iFP-300 series, N10</p> <p>Garmin® Forerunner 205, Forerunner 203, Forerunner 301, Edge 205, Edge 305</p> <p>Mio Technologies (Digi Walker®) Various Mio satellite navigation units that charge via Mini-USB</p> <p>Camera's Allows you to power many digital cameras that charge via their Mini-USB port</p>
	<p>For use with devices that can be charged via USB on your computer.</p> <p>iPod® iPod®(10Gb, 20Gb, 30Gb, 60Gb) iPod® Video, iPod® nano, iPod® Shuffle</p> <p>Microsoft Zune® Microsoft Zune 30Gb</p> <p>Sony Walkman® 6Gb Sony Walkman, 8Gb Sony Walkman, 20Gb Sony Walkman</p> <p>Creative Zen™ ZEN V Plus, ZEN V, ZEN Micro, ZEN MicroPhoto, ZEN Neeon, MuVo Slim</p>
	<p>Dedicated Nintendo DS® lite handheld Connector</p> <p>Nintendo DS lite handheld games system</p>

Optional Connectors (not supplied)


<p>Motorola® (square) (SCA024)</p> 	<p>Motorola® phones with the Square connector A630, A830, A835, A920, A925, A1000, C331 and C332 (TDMA versions), C333 (CDMA with antenna), C341, C343, C353 (TDMA), C975, E310, E550, E1000, MPx220, ROKR, T280i, T300p, T720, T720i, T721, T721i, T722i, T730, T731, V70, V260, V262, V265, V300, V400, V500, V505, V525, V545, V547, V550, V551, V600, V620, V635, V710, V810, V975, V1050, V60, V60i, V60c, V60p(PTT), V60s, V60t, V60t Colour, V60g, V60x, V66, V66i, V120c, 120t, 120x, 120c, 120e, 270c, 280, phones and V200 Personal Communicator.</p>
<p>Siemens - BenQ (SCA003)</p> 	<p>Siemens - BenQ® E71, E81, EF81, EL71, S68, SL91</p>
<p>Nintendo® GBA (SCA004)</p> 	<p>Dedicated Nintendo Gameboy® advanced Connector Nintendo Gameboy handheld games system and older DS game systems</p>
<p>Nintendo® GBM (SCA005)</p> 	<p>Dedicated Nintendo Gameboy Micro® Connector Nintendo Gameboy Micro handheld games system</p>
<p>Samsung® 2.5mm (SCA007)</p> 	<p>Samsung® devices --- SPH-A920, SPH-A940, SPH-A820, SPH-A560, SPH-A880, SPH-A800, SPH-A740, SPH-A760, MM-A700, VM-A680, SPH-A660, SPH-A600, VGA1000, SPH-N400, SPH-A500, SPH-N240, SPH-A460</p> <p>Kyocera® devices --- Phantom Series, KE413, KE413C, KX413, KE414, KE414C, KX414, Rave/K10 Royale Phone Series, K9, K10, K433, K434, KE433, KE433C, KE434, KX433, KX434, Blade Phone Series, KE424C, KX424</p> <p>Palm® Devices --- Tungsten E, Zire 72</p>
<p>Panasonic® (SAC008)</p> 	<p>Panasonic® GD92, GD52, GD93, GD75, GD95, TX310, TX320</p>

<p>Palm One® (SAC009)</p> 	<p>Palm one connector 600, 650, 680 and T5 PDA's</p>
<p>Alcatel® (SAC010)</p> 	<p>Alcatel® OT511, OT310, OT535, OT300, OT301, OT302, OT500, OT221, OT700</p>
<p>Siemens® C55 (SAC011)</p> 	<p>Siemens® C55 series phones A51, A52, A53, A55, A57, A60, A62, A65, A70, A75, AL21, AL72, AL75, AL76, AX21, AX72, AX75, AX76, C55, C60, C62, C65, C70, C72, C75, CC55, CC60, CC62, CC65, CC70, CC72, CC75, CF62, CF75, CF110, CFX65, CL75, CX65, CX70, CX75, M55, M60, M65, M75, MC55, MC60, MC65, MC75, ME75, S55, S65, S75, SP55, SP65, SP75, SF65, SK65, SL55, SL65, SL75, SG75, SXG75, SX1.</p>
<p>Siemens® C25 (SAC012)</p> 	<p>Siemens® C25 series phones A35, A36, A40, A50, C25, C28, C35, C35i, C45, M35, M35i, M45, M50, ME45, MT50, S25, S35, S35i, S45, S45i, SL42, SL45, SL45i</p>
<p>Sanyo® (SAC013)</p> 	<p>Sanyo® PM-8200, RL-4920, RL-4930, SCP-200, SCP-2400, SCP-3100, SCP-4900, SCP-5300, SCP-5400, SCP-5500, SCP-7200, SCP7300, SCP-8100, SCP-8200, VI-2300, MM-5600, MM-7400, MM-7500, MM-8300, MM-9000, EL-4920, RL-4930, SCP-200, SCP-2300, SCP-2400, SCP-3000, SCP-3100, SCP-350, SCP-4000, SCP-4500, SCP-4700, SCP-4900, SCP-5000, SCP-5150, SCP-5300, SCP-5400/RL2500, SCP-5500/VM4500, SCP-6000, SCP-6200, SCP-6400, SCP7200/RL2000, SCP7300/RL7300, SCP-8100, SCP-8200/PM-8200, VI-2300/4600/8100/5300/7200/5000/5150/6000/6200/C304/RL2000/2500/5400/5500/7300</p>
<p>Motorola® 3mm jack (SAC014)</p> 	<p>Motorola® C113, C113a, C115, C139, C155, C200, C300, C331 (GSM version), C332 (GSM version), C333 (GSM version), C350 (without antenna), C336, C450, C550, T190, T191, T193, T193m, V150, T2260, T2282, T2290, T2297, V.Series™ V2260, V2267, V2282, V2290, V2297, V2397, V220, V220 PINK</p>



Freeloader

<p>Sagem® 918 (SAC015)</p> 	<p>Sagem® MY-X2, MY-X3, MY-X5, MY-X6, 3000 series (apart from 3078, 3088, WA3050), 900 series</p>
<p>Micro USB (SAC016)</p> 	<p>Micro USB 8pin Compatible with Mobile devices that use the new Micro USB connection</p>
<p>Sony Ericsson® (Small) (SCA023)</p> 	<p>Sony Ericsson® Small connector A2218z, A2618, A2618s, A2628, A3618s, F500i, J210i, J300i, K300i, K500i, K508i, K600i, K608i, K700i, P800, P900, P910i, R300d, R300LX, R300z, R320, R320s, R380 WORLD, R380e, R380s, R520m, R600, S700i, T20e, T20s, T28 WORLD, T28z, T29, T29s, T39m, T60c, T60d, T61c, T61d, T61LX, T61z, T62u, T65, T66, T68, T68i, T100, T105, T200, T226, T230, T290i, T300, T306, T310, T316, T600, T610, T616, T620, T630, V600i, V800, Z200, Z300i, Z600, Z800i, Z1010</p>
<p>New Nokia / Motorola (SCA022)</p> 	<p>Nokia® / Motorola® Thin connector New "Classic" Phone range from Nokia (6500) Motorola® Moto Q9, Moto U9, Moto V8</p>
<p>New Samsung (SCA025)</p> 	<p>Samsung® Wide Thin connector G600, I450, L600, L760</p>
<p>Spaire Hub (SCA001)</p> 	<p>Replacement / Spare Hub for freeloader Replacement / Spare hub for the freeloader enabling you to have one on charge while charging another</p>

Freeloader

<p>Spare Hub (SCA020)</p> 	<p>Replacement / Spare Hub for freeloader (Pink)</p> <p>Replacement / Spare hub for the freeloader enabling you to have one on charge while charging another</p>
<p>AA / AAA batter charger (SC8090)</p> 	<p>AA/AAA battery charger for the freeloader</p> <p>Charge up 2 x AA (supplied) or 2 x AAA from the freeloader, Includes emergency charging cable for the freeloader and flashlight.</p>
<p>Super charger (SC8091)</p> 	<p>Super charger for the freeloader (Green)</p> <p>Supercharger is a super tough, all weather solar cell, capable of charging Freeloader in half the time. Simply strap Supercharger to a backpack, bike pannier or travel bag and plug it into Freeloader's hub for instant power wherever your travels take you.</p>
<p>Super charger (SC8092)</p> 	<p>Super charger for the freeloader (Pink)</p> <p>Supercharger is a super tough, all weather solar cell, capable of charging Freeloader in half the time. Simply strap Supercharger to a backpack, bike pannier or travel bag and plug it into Freeloader's hub for instant power wherever your travels take you.</p>
<p>Case for freeloader (SCA019)</p> 	<p>Carry case for the freeloader (Green)</p> <p>Protect Freeloader in this custom made, hard wearing travel pouch. The carry pouch is big enough to hold a Freeloader, charging cable and up to 6 power adaptors. The carry pouch has a belt loop for easy portability</p>
<p>Case for freeloader (SCA021)</p> 	<p>Carry case for the freeloader (Pink)</p> <p>Protect Freeloader in this custom made, hard wearing travel pouch. The carry pouch is big enough to hold a Freeloader, charging cable and up to 6 power adaptors. The carry pouch has a belt loop for easy portability</p>

Freeloader

12V car charger (SCA017)	<i>12V car charger for the freeloader</i>
	The Freeloader USB Car Charger, great for charging and powering the freeloader or any portable device that is usually charged via a computers' USB port.
Mains Charger (SCA018)	<i>Mains charger for the freeloader</i>
	The Freeloaders USB Mains Charger, great for charging and powering the freeloader or portable device that is usually charged via a computers' USB port.

V6 (march 2008)